

User Manual

Optical Headend

Ref. 4000 & 4001





CONTENTS

1.	INTRODUCTION	3
	Product description	. 3
	Package contents	
2.	INSTALLATION OF THE HARDWARE	4
	General set-up	. 4
	Combining the REF 4000 and the REF 4001 with the LOOPTHROUGH	
	Cascading the Headends	. 6
3.	CONFIGURATION OF THE MODULE	
	REF 4000 internal product overview	
	REF 4001 internal product overview	
4.	BLOCK DIAGRAM	
	TECHNICAL SPECIFICATIONS	
	SAFETY INSTRUCTIONS	
/.	CONDITIONS OF WARRANTY	12

No part of this manual may be copied, reproduced, transmitted, transcribed or translated into any language without permission.

Unitron reserves the right to change the specifications of the hardware and software described in these manuals at any time.

Unitron cannot be held liable for any damages resulting from the use of this product. Specifications are subject to change without notice. 8/20

© Unitron NV - Frankrijklaan 27 - B-8970 Poperinge - Belgium

T +32 57 33 33 63 F +32 57 33 45 24

sales@unitrongroup.com

www.unitrongroup.com



1. INTRODUCTION

Product description

The 4000 Optical Compact Headend converts 2 wideband satellite inputs into 2 wavelengths (1310nm – 1330nm) and puts them on 1 optical feed. The output signal is strong enough to support huge installations, with up to 128 passive splits. The 4001 Optical Compact Headend converts 1 input to 1550nm optical wavelength.

REF 4000: OPTICAL HEADEND TRANSMITTER 2 WAVELENGTHS (1310 NM - 1330 NM)

- 2 wideband V/H inputs
- frequency range: 5 2400 MHz
- 1 optical output (wavelengths: 1310nm (V) 1330nm(H))
- 9 dBm output power

REF 4001: OPTICAL HEADEND TRANSMITTER 1 WAVELENGTH (1550 NM)


- 1 wideband input
- frequency range: 5-2400 MHz
- 1 optical output (wavelength 1550nm)
- 9 dBm output power
- optical input for loopthrough (from ref. 4000)

Package contents

• 1x Optical Headend (REF 4000 or REF 4001)




2. INSTALLATION OF THE HARDWARE

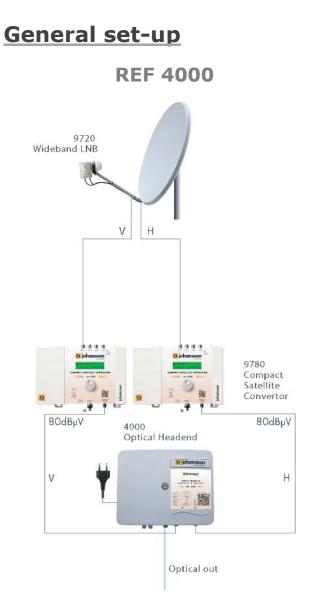

REF 4001




Combining the REF 4000 and the REF 4001 with the LOOPTHROUGH

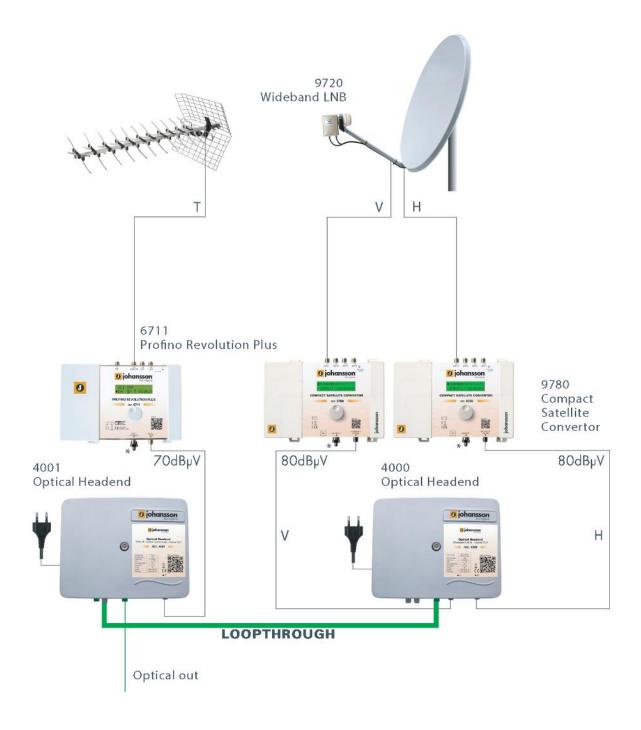



Cascading the Headends


The optical output signal can be split passively up to 128 times, or even more when you cascade the headends.

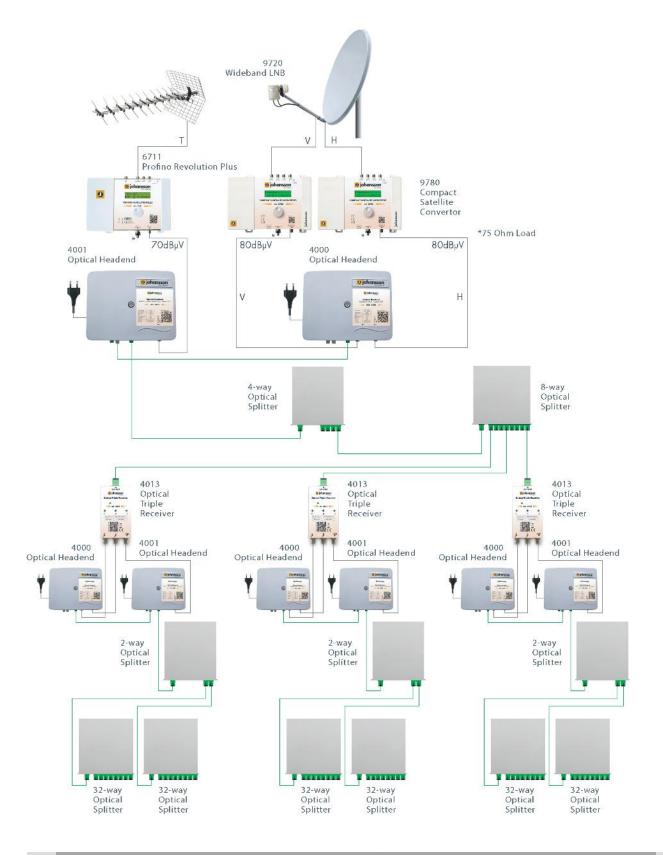




3. CONFIGURATION OF THE MODULE

- To configure the headend, remove the central bolt and lift the top lid
- The settings will appear on the LED display.
- Use the buttons (SET-DOWN-UP) in the top right corner of the device.
- Follow the steps below to configure the headend.

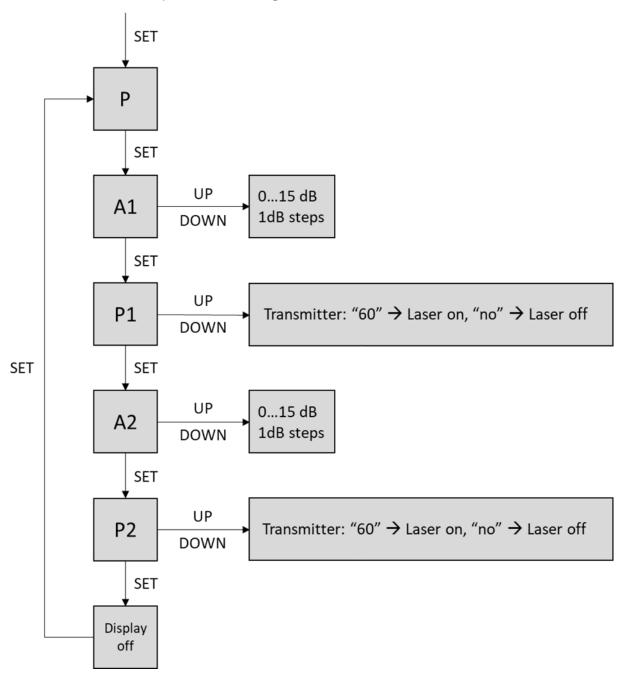




REF 4000 internal product overview

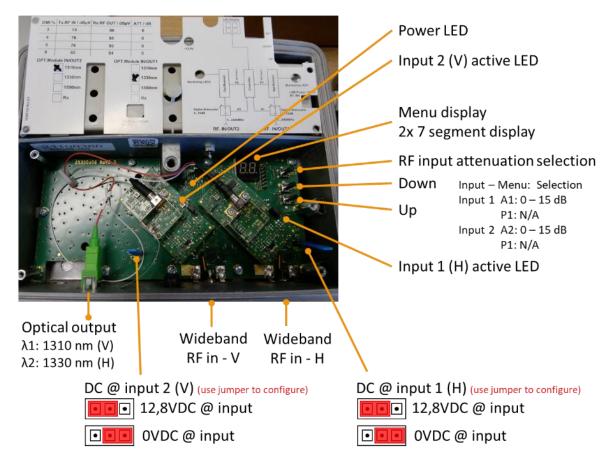


REF 4001 internal product overview

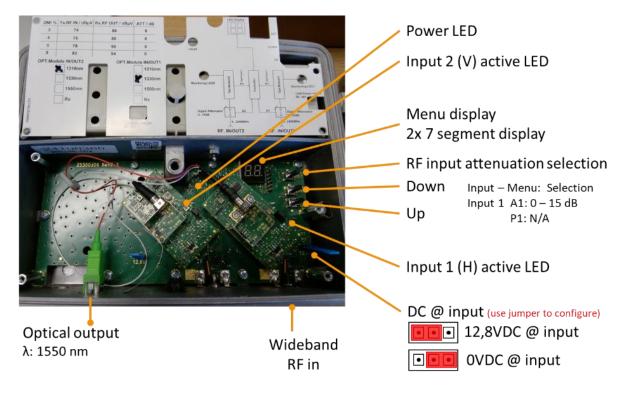



4. BLOCK DIAGRAM

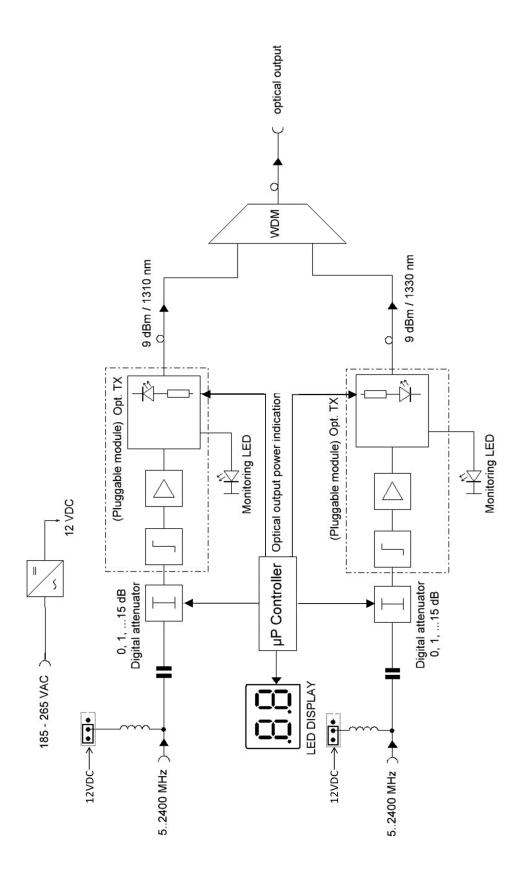

UNITR

5. TECHNICAL SPECIFICATIONS

		REF 4000	REF 4001	
Inputs	-	2 RF	1 RF + 1 optical (loopthrough from ref. 4000)	
Outputs	-	1 Op	1 Optical	
Optical wavelength	nm	1310 - 1330	1550	
Frequency range	MHz	5 - 2400		
Optical output power	dBm	+9 (per wa	+9 (per wavelength)	
Ripple	dB		+/- 2.5	
Optimal input level	dBµV	SAT: 80 per Transponder TERR: 70 per MUX		
	dB	0 - 15		
Input attenuator				
Laser type	-	DFB		
Laser LED control	-	Green LED on		
LNB power supply	-	12.8V / max. 240 mA		
Optical connectors	-	SC/APC		
RF connectors	-	F-fer	F-female	
Power consumption	W	9	6	
Power supply	VAC	200 - 240		
Operating temperature	°C	-20 to +55		
range				
Protection class	-	IP 50		
Dimensions	mm	225 x 190 x 86		
Weight	kg	1.	1.8	



6. SAFETY INSTRUCTIONS



Read these instructions carefully before connecting the unit

To prevent fire, short circuit or shock hazard:

- Do not expose the unit to rain or moisture.
- Install the unit in a dry location without infiltration or condensation of water.
- Do not expose it to dripping or splashing. •
- Do not place objects filled with liquids, such as vases, on the apparatus.
- If any liquid should accidentally fall into the cabinet, disconnect the power plug.



\bigwedge To avoid any risk of overheating:

- Install the unit in a well aery location and keep a minimum distance of 15 cm around the apparatus for sufficient ventilation
- Do not place any items such as newspapers, table-cloths, curtains, on the unit that might cover the ventilation holes.
- Do not place any naked flame sources, such as lighted candles, on the apparatus
- Do not install the product in a dusty place
- Use the apparatus only in moderate climates (not in tropical climates)
- Respect the minimum and maximum temperature specifications

To avoid any risk of electrical shocks:

- Connect apparatus only to socket with protective earth connection.
- The mains plug shall remain readily operable •
- Pull out power plug to make the different connections of cables
- To avoid electrical shock, do not open the housing of adapter. .



Maintenance



(A) Only use a dry soft cloth to clean the cabinet.

😃 Do not use solvent

A For repairing and servicing refer to qualified personnel.



Dispose according your local authority's recycling processes



7. CONDITIONS OF WARRANTY

Unitron N.V. warrants the product as being free from defects in material and workmanship for a period of 24 months starting from the date of production indicated on it. See note below.

If during this period of warranty the product proves defective, under normal use, due to defective materials or workmanship, Unitron N.V, at its sole option, will repair or replace the product. Return the product to your local dealer for reparation.

THE WARRANTY IS APPLIED ONLY FOR DEFECTS IN MATERIAL AND WORKMANSHIP AND DOES NOT COVER DAMAGE RESULTING FROM:

- Misuse or use of the product out of its specifications,
- Installation or use in a manner inconsistent with the technical or safety standards in force in the country where the product is used,
- Use of non-suitable accessories (power supply, adapters...),
- Installation in a defect system,
- External cause beyond the control of Unitron N.V. such as drop, accidents, lightning, water, fire, improper ventilation...

THE WARRANTY IS NOT APPLIED IF

- Production date or serial number on the product is illegible, altered, deleted or removed.
- The product has been opened or repaired by a non-authorized person.

NOTE

Date of production can be found in the product's serial number code. The format will either be "YEAR W WEEK" (e.g., 2017W32 = year 2017 week 32) or "YYWW" (e.g., 1732 = year 2017 week 32).



www.unitrongroup.com

UNITRON NV Frankrijklaan 27 B-8970 Poperinge Belgium

T +32 57 33 33 63 F +32 57 33 45 24

sales@unitrongroup.com

www.unitrongroup.com

